



**SEE OWNER'S MANUAL FOR  
CALIBRATION PROCEDURE**

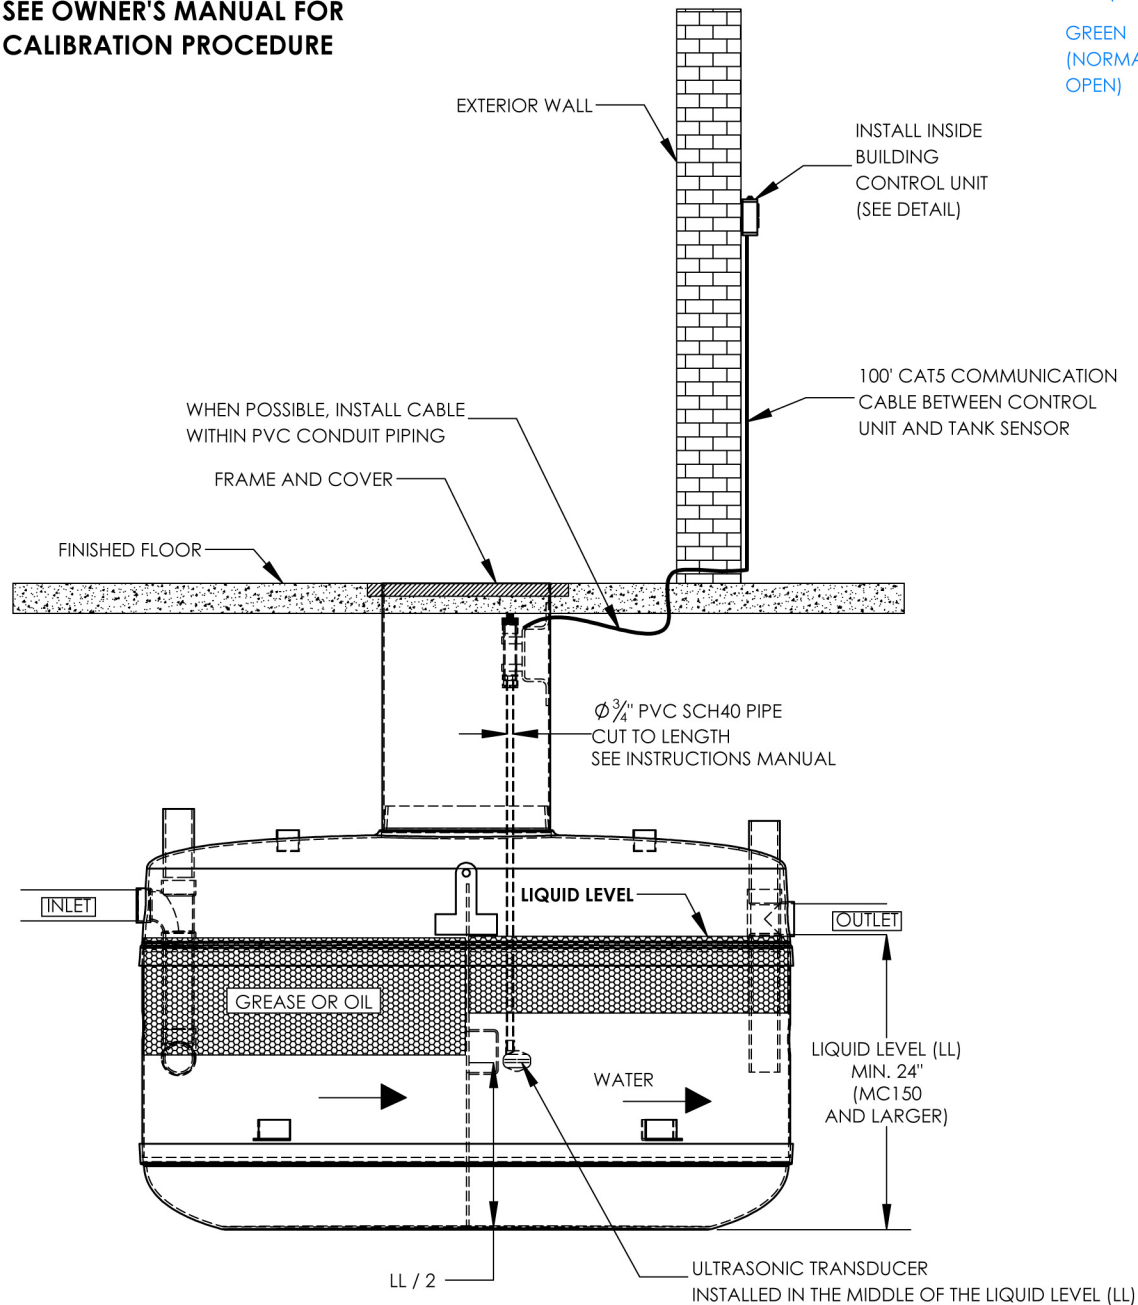


ALARM IS SHOWN TO BE INSTALLED  
ON OUTLET SIDE OF TANK

1. TANKS INSTALLED IN SERIES (EX. GMC 2000(2)) WILL HAVE ALARM INSTALLED IN THE FIRST TANK OUTLET SIDE
2. SINGLE TANKS (WITH BAFFLE) WILL HAVE ALARM INSTALLED ON THE INLET SIDE (BOTH INLET AND OUTLET INSTALLATION IS ALLOWED BUT GT RECOMMENDS INLET)

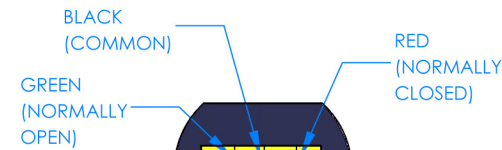

DETAIL A  
SCALE 1 : 2  
BUILDING AUTOMATION  
ALARM OUTPUT

LCD DISPLAY OF  
TANK CONDITIONS  
ALARM MONITOR  
INCLUDES AUDIBLE  
AND VISUAL ALARM

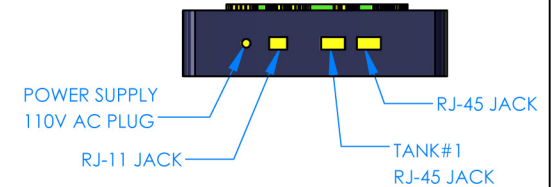

PLUG TRANSDUCER CABLE INTO TANK #1 RJ-45 JACK

Product Code: GW-200

DWG. TITLE: WIRED  
ALARM G2 OUTLET SIDE  
INSTALLATION

PROJECT:

SIZE  
A

DRAWING NOT TO SCALE

**Dra<sup>n</sup>Net**  
**TECHNOLOGIES**

DWG #: 21-5484-S

REV. 3